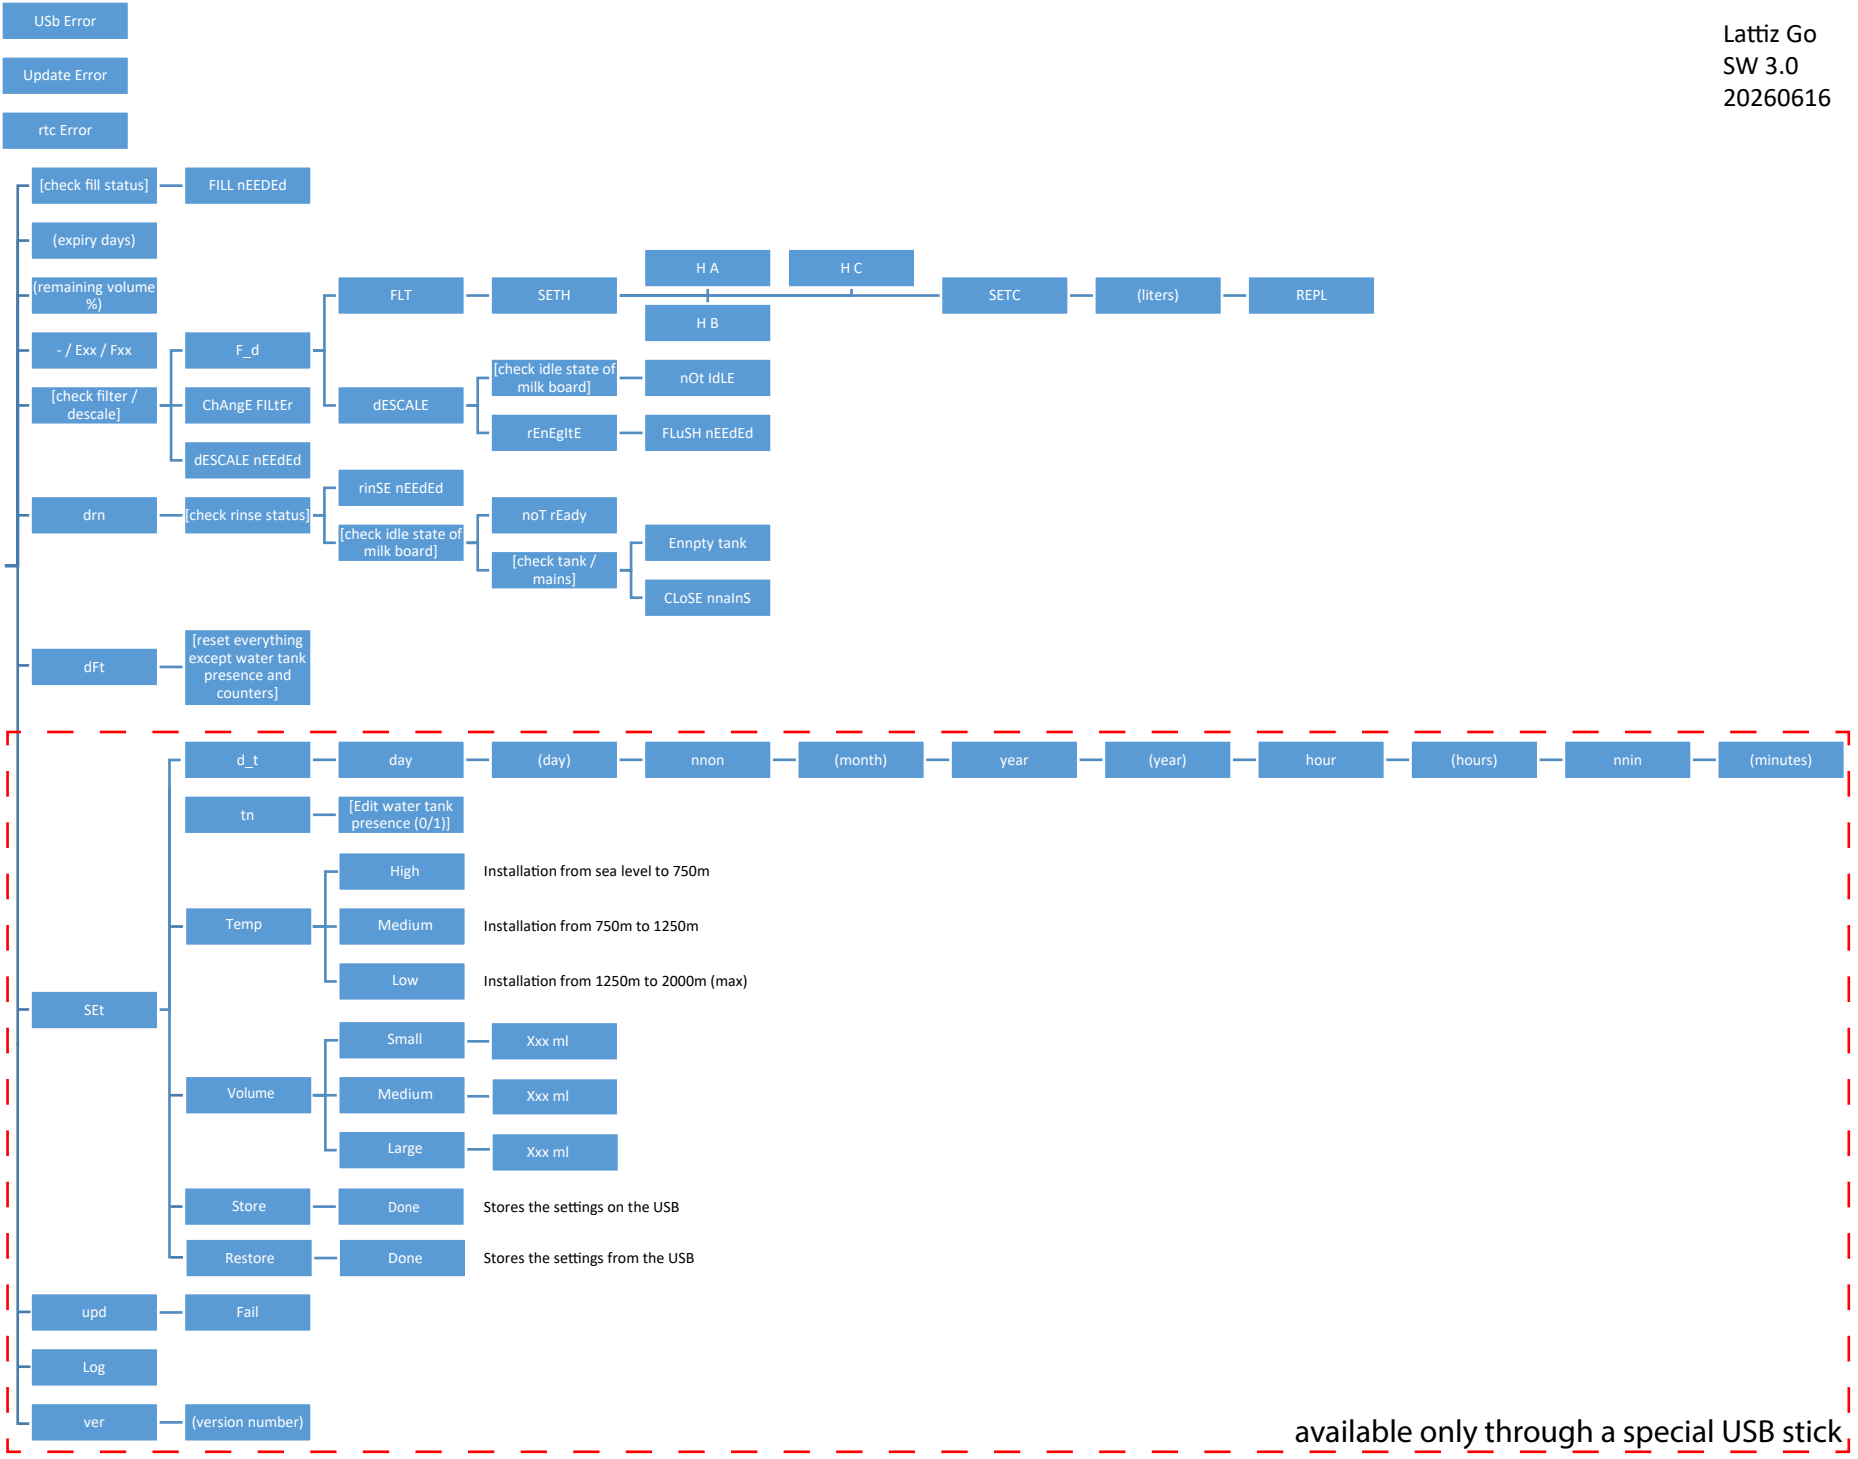

USb Error
Update Error
rtc Error
Lattiz Go
SW 3.0
20260616
[check fill status]
FILL nEEDEd
(expiry days)
(remaining volume %)
- / Exx / Fxx
F_d
FLT
SETH
H A
H C
H B
SETC
(liters)
REPL
[check filter / descale]
ChAngE FILtEr
dESCALE
[check idle state of milk board]
nOt IdLE
rEnEgItE
FLuSH nEEdEd
dESCALE nEEdEd
drn
[check rinse status]
rinSE nEEdEd
[check idle state of milk board]
noT rEady
[check tank / mains]
Ennpty tank
CLoSE nnaInS
dFt
[reset everything except water tank presence and counters]
SEt
d_t
day
(day)
nnon
(month)
year
(year)
hour
(hours)
nnin
(minutes)
tn
[Edit water tank presence (0/1)]
Temp
High
Installation from sea level to 750m
Medium
Installation from 750m to 1250m
Low
Installation from 1250m to 2000m (max)
Volume
Small
Xxx ml
Medium
Xxx ml
Large
Xxx ml
Store
Done
Stores the settings on the USB
Restore
Done
Stores the settings from the USB
upd
Fail
Log
ver
(version number)
available only through a special USB stick